



On the display will be the internal temperature of the cold room.

To adjust the set point temperature follow the below steps.

1) Press & hold the **set** button until the set point temperature blinks.

2) Using the **Up** & **Down** arrows adjust your set point temperature to the desired set point.

3) Once the set point has been decided, hold down the **set** button & it will be saved.

Once again the displayed temperature will be the internal temperature of the cold room

